

SAFEBOX INSTRUCTIONS

Black-model safebox:

1. With the door of the safe open, remove the cover (located on the inside of the door near the hinges) press the red button and display will show "SET CODE".
2. Enter a 3 to 8-digit code that you wish to have as your new user code, then confirm by pressing the "START" button.
3. You will hear a beep and the screen will display "IN" & the digits you entered. This is confirmation that your code has been successfully changed.

White-model safebox:

TO LOCK

1. Close the door by gently pushing it shut.
2. Enter a 4-digit code that you wish to have.
3. Press "#" to confirm – safebox will automatically lock.

TO OPEN

1. Enter your 4-digit code.
2. Press "#" button & safe will unlock automatically.
3. You may set a different code each time you unlock the safe.